


How to Measure Frameless Cabinets

Sketch the Kitchen

Start by drawing a simple sketch of the kitchen layout. This will help you keep track of measurements and easily match each new door with the correct opening during install.

Next, number the openings on your drawing. Start with the upper left doors, then the lower left doors. Then number the drawer fronts, also starting on the left side.

Write down the location of the hinges (left or right) on each door. (See Fig. 1)

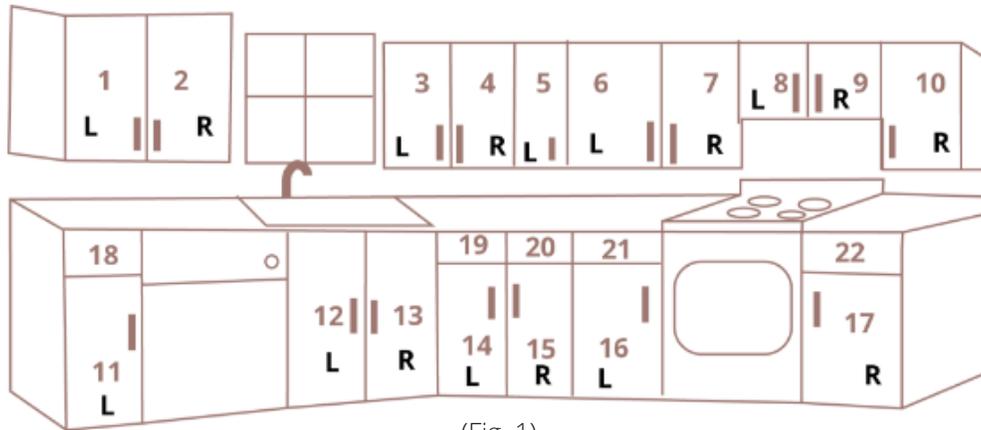

(Fig. 1)

Measure the Existing Doors

With frameless cabinets, there is only one type of hinge that works so you can measure your old doors. Measure the back of the existing doors and drawer fronts by finding the width x height in inches, rounded to the nearest 1/16" (.0625).

Make sure you measure the back of the door in case it has a bevel or routed edge that could impact your measurement.